 


105.00 mm

65.00 mm

Water Flosser

Model SLK318

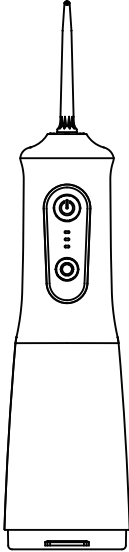

Contents

1. Important safeguards

2. Product description

3. Getting started

4. Cleaning and maintenance

5. Warranty card

01

03

05

09

10

Please read all instructions before using

65.00 mm

Important safeguards

⚠ WARNING: To reduce the risk of burns, electric shock, fire or personal injury, please read all instructions carefully.

*Warning

1. The power adapter: DC5V-1A/2A.
Do not connect the device to a power supply voltage different from that marked on the unit or power adapter.
2. Stop using the product if its cord or plug is damaged, if the unit malfunctions, or if it has been dropped or broken.
3. Keep the unit away from open flames and hot surfaces.
4. Do not submerge or drop the power adapter into water or any other liquids. Never handle the power adapter with wet hands.
5. Unplug the power adapter and charging cable before cleaning or maintenance.
6. Inspect the power adapter cord for damage prior to first use and throughout the product's service life.
7. Close supervision is required when the product is used by, applied on, or near children under 6 years of age or persons with disabilities.
8. Do not use this product if you have any open wounds inside your mouth or on your tongue.
9. Do not aim the water stream under your tongue, into ears, nostrils or other sensitive body parts. This device generates high water pressure that may cause severe injury to these areas.

01

65.00 mm

*Important Notes

1. Operate this product only in accordance with these instructions or as advised by your dental professional.
2. Do not use the product without a nozzle attached.
3. Do not drop any foreign objects into, or insert them into, any openings of the unit.
4. Mouthwash may be used with this device. Do not add iodine, bleach or insoluble substances to the water tank.
5. Hold the nozzle close to your teeth before turning the unit on.
6. Any opening or disassembly of the product will void the warranty. If repairs are required, please contact our after-sales service team.
7. Stop operation when the water reservoir is empty.
8. Unplug the power adapter from the electrical outlet once charging is complete.
9. This device is intended solely for oral cleaning; do not use it for any other purpose.
10. If the water flosser will be stored for an extended period (6 months or longer), fully charge it before storage.
11. The waterproof performance remains intact even without the dust plug fitted.
12. At the end of the battery's service life, dispose of the unit at your nearest recycling facility in compliance with local or national regulations.

02

65.00 mm

Product description

Nozzle

Power button

Mode Indicator Light

Mode button

Water tank

Water inlet

Type-C charging cable

03

65.00 mm

①

②

③

④

⑤

①: Classic Jet Tip — General Daily Cleaning
②: Plaque Removal Tip — For Implants, Crowns, Bridges, Retainers & General Use
③: Orthodontic Tip — For Braces & Daily Use
④: Periodontal Pocket Tip — For Periodontal Pockets & Furcation Areas
⑤: Tongue Scraper Tip — To Freshen Breath

⚠ Not all tips included in a set of product accessories.

Main parameters

Model:	SLK318
Battery specification:	1200mAh
Rated voltage/power:	5V / 8W
Waterproof level:	IPX7
Charging time:	Approx. 2~3 hrs
Usage time:	70 mins
Mode:	Pulse / soft / Strong
Water tank capacity:	318ml
Product weight:	300g±5%
Host size:	65*82*114mm (After Storage)

04

 
390.00 mm

105.00 mm

Getting started

*Charging

1. Ensure the unit and your hands are dry, and the device is powered off. Open the tank lid to release trapped air inside the water tank.
2. Flip open the silicone charging port dust plug, insert the Type-C charging cable into the charging port, then connect the cable to a power adapter (sold separately).
3. A full charging cycle takes approximately 2~3 hours. On a full charge, the unit delivers up to 70 minutes of runtime in Pulse mode.
4. Fully charge the device before its first use. When charging is complete, all three white mode indicator lights will stay steadily lit.




05

*Inserting and Removing the Nozzle

1. Take the nozzle out of its packaging.
2. Insert the nozzle into the opening on the top of the water flosser. Press firmly until you hear a click confirming the nozzle is locked in place.
3. To remove the nozzle, press the nozzle release key first, then pull the nozzle out gently (do not yank it directly with brute force).
4. Travel-friendly feature: The nozzle can be stored inside the reservoir for easy carrying.

CAUTION: Do not press the nozzle eject button while the unit is in operation.

Nozzle key

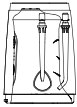

*Filling the Reservoir

Open the reservoir lid. Hold the water flosser upright, then fill the reservoir with clean water.

Note:
1. Do not add toothpaste, salt, bleach or other solid/insoluble substances to the reservoir.
2. You may use mouthwash with this water flosser. After using mouthwash, rinse the unit to avoid dogging; partially fill the reservoir with warm water and run the device with the nozzle pointing into a sink until the system is fully flushed empty.



06

*Adjusting Pressure Mode Settings

1. Tap the power button to start or stop the unit. The 3-second gradual pressure build-up (crescendo) function will activate automatically.
2. Press the mode button on the handle to switch between different water pressure modes.
3. New users are recommended to start with Pulse mode, then adjust to your preferred intensity.

● Pulse mode: Variable pulsed water flow, ideal for beginners.
● Soft mode: Gentle water pressure, suitable for users with sensitive gums and first-time users.
● Strong mode: Delivers powerful flow to clear stubborn stains and remove dental plaque efficiently.

Power button

Mode button

 
Mode indicator lights (Pulse / Soft / Strong)

Operation Indicator Light

07

*Recommended Technique

1. Lean low over a sink and place the nozzle inside your mouth. Aim the nozzle toward your gum line, then turn the unit ON. Close your lips lightly to prevent splashing, while allowing water to flow freely from your mouth into the sink.
2. For optimal cleaning results, start with your back teeth and work forward to your front teeth. Glide the nozzle gently along your gum line and pause briefly between each tooth. Repeat until you clean both the inner and outer surfaces of all upper and lower teeth.
3. Hold the unit upright during use for best performance.
4. When finished, power off the unit and empty any remaining water from the water tank.

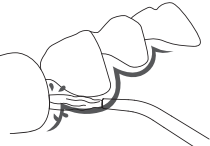

*Important Notes


1. Minor gingival bleeding is normal during initial use of the water flosser. This condition will improve within 1~2 weeks of regular use.
2. Do not press the nozzle hard against your teeth or gums.

08

*Cleaning and Maintenance

1. After each use, power off the unit and empty all water from the water tank.
2. How to detach the water tank for nozzle storage: Hold the main unit body with your left hand and grip the water tank with your right hand. Twist the tank downward in a counter-clockwise direction, then pull it down to separate the tank from the main body.
3. Nozzle Tip Storage Guide The water tank features an internal compartment for storing nozzle tips.

● Before use: Detach the water tank, take out the nozzle tip, then install it onto the center of the unit knob.
● After use: Remove the nozzle tip and place it back inside the water tank for storage.

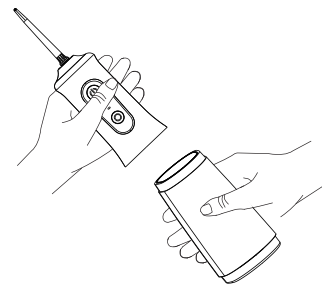

09

Warranty Card

Thank you for purchasing our water flosser. Please retain this card properly for future service.

1. This product comes with a 1-year limited warranty.
★2. To file a warranty claim, the purchaser must provide the original purchase receipt as proof of purchase date, and submit the full product for inspection upon request.
3. The following circumstances shall render this warranty null and void:
1) Unit purchased from unauthorized online resellers
2) Damage or malfunction caused by unauthorized disassembly
3) Damage or malfunction resulting from drops or impact
4) Malfunction arising from improper operation or misuse
5) Repairs performed by unapproved third-party service providers

Buyer		Purchase time	
Name		Contact details	
Address			
Product problem			

10

390.00 mm